

System Board D2300 for RX200 S3

Technical Manual

Comments... Suggestions... Corrections...

The User Documentation Department would like to know your opinion of this manual. Your feedback helps us optimize our documentation to suit your individual needs.

Fax forms for sending us your comments are included in the back of the manual.

There you will also find the addresses of the relevant User Documentation Department.

Certified documentation according to DIN EN ISO 9001:2000

To ensure a consistently high quality standard and user-friendliness, this documentation was created to meet the regulations of a quality management system which complies with the requirements of the standard DIN EN ISO 9001:2000.

cognitas. Gesellschaft für Technik-Dokumentation mbH
www.cognitas.de

Copyright and Trademarks

Copyright © 2006 Fujitsu Siemens Computers GmbH.

All rights reserved.

Delivery subject to availability; right of technical modifications reserved.

All hardware and software names used are trademarks of their respective manufacturers.

Contents

1	Introduction	5
2	Important notes	7
2.1	Notes on safety	7
2.2	CE Certificate of Conformity	10
2.3	Environmental protection	11
3	Features	13
3.1	Overview	13
3.2	Main memory	17
3.3	PCI-Bus	19
3.3.1	ISA bus resources	20
3.3.2	PCI resources	21
3.4	Screen resolution	23
3.5	Temperature / system monitoring	23
3.6	Interfaces and Connectors	25
3.6.1	External ports	27
3.7	Settings with jumpers	29
4	Replacing the lithium battery	31
	Abbreviations	33

1 Introduction

This technical manual describes the system board D2300, which is equipped with one or two Intel® processors.

Further information you will find in the BIOS description.

For additional driver information, refer to the Readme files located on the server hard disk and on the supplied "Update CDs" or the "ServerStart" CD.

Notational conventions

The meanings of the symbols and fonts used in this manual are as follows:



<i>italics</i>	indicates commands, menu options or software programs.
fixed font	indicate system output on the monitor.
semi-bold fixed font	indicates values to be entered through the keyboard.
Key symbol	<p>indicates keys according to their representation on the keyboard.</p> <p>If capital letters are to be entered explicitly, then the Shift key is shown, e.g. SHIFT - A for A.</p> <p>If two keys need to be pressed at the same time, then this is shown by placing a hyphen between the two key symbols.</p>
"Quotation marks"	Indicates names of chapters and terms that are being emphasized.
►	Describes an operation that must be performed.
 CAUTION!	Pay particular attention to texts marked with this symbol. Failure to observe these warnings may endanger your life, destroy the system or lead to the loss of data.
	Indicates additional information, notes and tips

Table 1: Notational conventions

2 Important notes

In this chapter you will find essential information regarding safety when working with your server.



CAUTION!

With the system board installed you must open the system to access the system board. How to dismantle and reassemble the system is described in the service manual accompanying your system.

When installing the system board, refer to the specific installation information in the operating and/or service manual for the receiving server.

2.1 Notes on safety



CAUTION!

- The actions described in these instructions should only be performed by authorized, qualified personnel. Equipment repairs should only be performed by qualified staff. Any failure to observe the guidelines in this manual, and any unauthorized openings and improper repairs could expose the user to risks (electric shock, fire hazards) and could also damage the equipment. Please note that any unauthorized openings of the device will result in the invalidation of the warranty and exclusion from all liability.
- Transport the device only in the antistatic original packaging or in packaging that protects it from knocks and jolts.
- Only install expansions that are allowed for the system board. If you install other expansions, you may damage the requirements and rules governing safety and electromagnetic compatibility or your system. Information on which system expansions are approved for installation can be obtained from our customer service center or your sales outlet.
- The warranty expires if the device is damaged during the installation or replacement of system expansions.



- Components can become very hot during operation. Ensure you do not touch components when making extensions to the system board. There is a danger of burns!
- Transmission lines to peripheral devices must be adequately shielded.
- To the LAN wiring the requirements apply in accordance with the standards EN 50173 and EN 50174-1/2. As minimum requirement the use of a protected LAN line of category 5 for 10/100 Mbps Ethernet, and/or of category 5e for Gigabit Ethernet is considered. The requirements of the specification ISO/IEC 11801 are to be considered.
- Never connect or disconnect data transmission lines during a storm (risk of lightning hazard).

Batteries



CAUTION!

- Incorrect replacement of lithium battery may lead to a risk of explosion. The batteries may only be replaced with identical batteries or with a type recommended by the manufacturer.

It is essential to observe the instructions in the [chapter “Replacing the lithium battery”](#).

Modules with electrostatic-sensitive components

Boards with electrostatic sensitive devices (ESD) are marked with the following label:

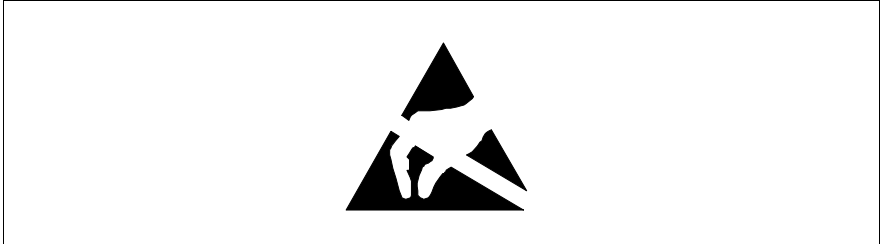


Figure 1: ESD label

You must follow the instructions below when handling modules containing electrostatic-sensitive components

- You must always discharge yourself of static charges (e.g. by touching a grounded object) before touching the components.
- The equipment and tools you use must be free of static charges.
- Remove the power plug from the power socket before inserting or removing boards containing ESDs.
- Always hold boards with ESDs by their edges.
- Do not touch any exposed pins or conductors on a component.
- Use a grounding cable designed for this purpose to connect yourself to the system unit as you install/deinstall the board.
- Place all components on a static-free surface.



You will find a detailed description for handling ESD components in the relevant European or international standards (EN 61340-5-1, ANSI/ESD S20.20).

Notes about boards

- During installation/deinstallation of the system board, observe the specific instructions described in the service manual for the server.
- Remove the plug from the mains outlet so that system and system board are totally disconnected from the mains voltage.
- To prevent damage to the system board, the components and conductors on it, please take great care when you insert or remove boards. Take great care to ensure that extension boards are slotted in straight, without damaging components or conductors on the system board, or any other components, for example EMI spring contacts
- Be careful with the locking mechanisms (catches, centring pins etc.) when you replace the system board or components on it, for example memory modules or processors.
- Never use sharp objects (screwdrivers) for leverage.

2.2 CE Certificate of Conformity



The shipped version of this board complies with the requirements of the EEC directive 89/336/EEC "Electromagnetic compatibility".

Compliance was tested in a typical PRIMERGY configuration.

2.3 Environmental protection

Environmentally-friendly product design and development

This product has been designed in accordance with the Fujitsu Siemens Computers standard for “environmentally friendly product design and development”. This means that key factors such as durability, selection and labeling of materials, emissions, packaging, ease of dismantling and recycling have been taken into account.

This saves resources and thus reduces the harm done to the environment.

Energy-saving information

Devices that do not need to be constantly switched on should be switched off until they are needed as well as during long breaks and after completion of work.

Packaging information

Do not throw away the packaging. You may need it later for transporting the system. If possible, the equipment should only be transported in its original packaging.

Information on handling consumables

Please dispose of batteries in accordance with local regulations.

In accordance with EU directives, batteries must not be disposed of with unsorted domestic waste. They can be returned free of charge to the manufacturer, dealer or an authorized agent for recycling or disposal.

All batteries containing pollutants are marked with a symbol (a crossed-out garbage can). They are also marked with the chemical symbol for the heavy metal that causes them to be categorized as containing pollutants:

Cd Cadmium

Hg Mercury

Pb Lead

To Germany applies:

- Private customers can return spent batteries free of charge at the point of sale or in its immediate proximity.
- The commercial end-user is legally obliged to return defective or spent batteries to the distributor or designated return and collection systems available to you.

Labels on plastic casing parts

Please avoid sticking your own labels on plastic parts wherever possible, since this makes it difficult to recycle them.

Returns, recycling and disposal



The device must not be disposed of with domestic waste. This device is labeled in compliance with European directive 2002/96/EG on waste electrical and electronic equipment (WEEE).

This directive sets the framework for returning and recycling used equipment and is valid across the EU. When returning your used device, please use the return and collection systems available to you. Further information can be found at www.fujitsu-siemens.com/recycling.

Details regarding the return and recycling of devices and consumables within Europe can also be found in the "Returning used devices" manual, via your local Fujitsu Siemens Computers branch or from our recycling center in Paderborn:

Fujitsu Siemens Computers
Recycling Center
D-33106 Paderborn

Tel. +49 5251 8 18010

Fax +49 5251 8 18015

3 Features

3.1 Overview

Processors

- 1 or 2 x Intel® Dual-Core Xeon™ processors
- 2 processor sockets LGA771 for Intel® Dual-Core Xeon™ processor with 667 / 1066 MHz front side bus (133/266 MHz quadruple transmission rate)
- 2 x 2 Mbyte (Intel Dual-Core 5000 sequence processor) or 1 x 4 Mbyte (Intel Dual-Core 5100 sequence processor), second level cache, ECC
- Support of SMP, MPS 1.4 compliant
- 2 x VRM 11.0 onboard (EVRD)

Main memory

- 8 slots for main memory FBD-533 and FBD-667 (FBD - Fully Buffered DIMMs) memory modules,
2 channel with 2 modules per channel with 512 MB, 1 Gbyte, 2 Gbyte and 4 Gbyte
- maximum 32 Gbyte of memory
- supports „4 way interleaved memory subsystems“ (4 identical memory modules have to installed at the same time)
- ECC multiple bit error detection and single bit error correction
- memory scrubbing function
- Single Device Data Correction (SDDC) function (Chipkill™)
- memory mirroring function

Chips on the system board

- Intel® MCH (memory controller hub) chipset (north bridge)
- Intel® ESB2-V processor (south bridge)
- Intel® PXH-V hub for PCI bridge (Option 2, on page 15)
- Broadcom LAN controller (BCM 5715C)
- iRMC chipset with integrated graphics controller
- SAS controller (LSI 1068) with IME functionality
- Super I/O controller (SMSC DME 1737)
- Flash EPROM for:
 - IME firmware
 - BIOS
 - LAN
 - Server Management (SM)

internal connectors

- 1 IDE connector (CD-ROM/DVD-ROM)
- 1 SATA connector
- USB Type C (for USB port on front side)
- I2C connector
- main power connector (12V, -12V and 5V auxiliary supply)
- 12V (CPU) power connector
- IPMB connector
- HDD activity connector
- control panel
- battery holder
- connectors for PWM fans (Puls Wide modulation)

external connectors

- 1 serial port (COM1) for system and BMC (shared)
- 2 PS/2 interfaces for keyboard and mouse
- 4 USB 2.0 ports with 480 Mbits/s (2 x front, 2 x rear)
- 1 VGA port
- 2 RJ45 LAN port

PCI slots

There are two PCI expansion slots on the system board:

- PCI-X1 / PCI-X expansion slot
- PCI-Express x8 expansion slot

The riser boards on the PCI riser board assembly convert the functionality of the system board expansion slots to a pair of slots positioned at a 90° angle from the system board. There are two possible configuration.

- Option 1
 - One standard half length PCI Express x8 slot
 - One low-profile half length 64-bit/100 MHz PCI-X slot
 - Option 2
 - One standard half length 64-bit/100 MHz PCI-X slot*
 - One low-profile half length 64-bit/100 MHz PCI-X riser board
- * The PXH-V daughter board is mounted on the PCI riser board assembly.

BIOS features

- Phoenix System BIOS V 4.06
- SMBIOS 2.31 (DMI)
- MultiProcessor Specification 1.4
- Server Hardware Design Guide 3.0
- WfM 2.0
- IPMI V2.0
- ACPI 1.0b support
- LSI SCSI BIOS with IME (Integrated Mirroring Enhanced)
- USB keyboard/mouse
- boot possible from:
 - CD-ROM
 - USB drive
 - LAN
- console redirection support
- OEM logo
- CPU, memory disable
- memory mirroring support

Environmental protection

Battery in holder

Form factor

249 x 455 mm

3.2 Main memory

The system board supports up to 32 Gbyte main memory. 8 slots (4 memory banks with 2 modules) are available for the main memory. Each memory bank must be equipped with two 512 Mbyte, 1 Gbyte, 2 Gbyte or 4 Gbyte (FBD - Fully Buffered DIMM) memory modules.

ECC with memory scrubbing and with the Single Device Data Correction (SDDC) function is supported.

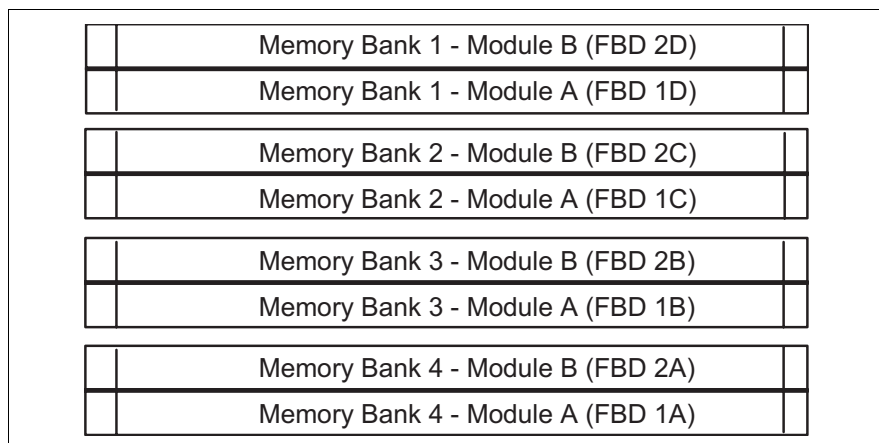


Figure 2: Structure of the memory in the memory banks and memory modules

Module population

- The memory modules have to be registered Fully Buffered DIMMs (ECC DDR2 533/667).
- The memory modules have to be populated in pairs.
- Each pair must consist of identical memory modules.
- Each memory bank and channel (module) must be equipped with 2 memory modules.
- The module capacity between pairs can differ: pair 1A/1B can be populated with two 512 Mbyte modules and pair 2A/2B with two 1 Gbyte modules.

Install identical modules (of the same type, manufacturer, speed, timing, and organization) per the instructions below:

- When operating in non-mirror mode:
 - Install the first pair in the FBD 1A and FBD 1B slots.
 - Memory upgrade granularity is two DIMMs.
 - Observe the following channel pair sequence during installation:
FDB 1C - FDB 1D, FDB 2A - FDB 2B, then FDB 2C - FDB 2D
- When operating in single DIMM mode, the module should be installed in the FBD 1A slot.

3.3 PCI-Bus

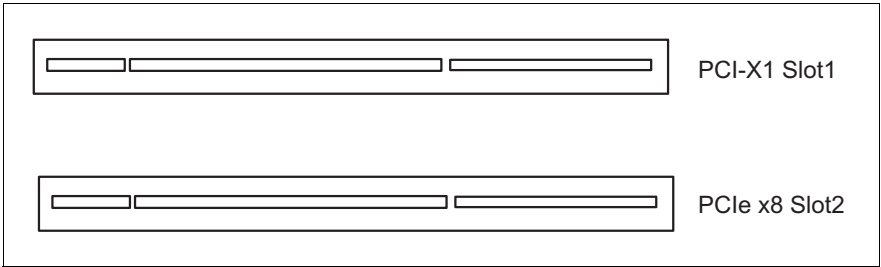


Figure 3: Representation of the PCI-outlets

PCI slots

The following table shows an overview of the PCI slots:

PCI slot	64Bit	Frequency in MHz	Description
1	64 bit	100/133	64 bit PCI-X slot, low profile
2	64 bit	133	64 bit PCIe x8 slot, low profile and full size

3.3.1 ISA bus resources

Device	IRQ	Address	DMA
Timer	0	040-043	
Keyboard	1	060.064	
Serial port COM1	4	3F8-3FF	
Floppy disk drive controller	6	3F0-3F5, 3F7	2
Ethernet controller	7		
Real-time clock (RTC)	8	070-071	
SCI interrupt	9		
SMB controller	9		
PS/2 mouse controller	12		
Numeric processor	13	0F0-0FE	
IDE controller (primary)	14	1F0-1F7, 3F6	
IDE controller (secondary)	15	170-177, 376	



IRQ 2, 3, 5, 11 are available for additional devices

„IRQ“ = interrupt assigned as shipped

„Address“ = this address can be used for your particular device

„DMA“ = this DMA can be used for your particular device

Default settings are shown in bold print.

3.3.2 PCI resources

PCI IRQ Line x - Assignment of the PCI interrupts

PCI IRQ Line x defines which ISA interrupts are used for the separate PCI slots.

If you select *Auto* in the BIOS setup, the interrupts are assigned automatically and no further settings are required.

Multifunctional PCI boards or boards with an integrated PCI-to-PCI bridge can use several PCI interrupts (INTA#, INTB#, INTC#, INTD#). Mono functional PCI boards (default) only use one PCI interrupt (INTA#) per PCI slot.

The PCI interrupts INTA#, INTB#, INTC# and INTD# are available for each PCI slot.

The same interrupt can be assigned simultaneously to several PCI boards. You should avoid this condition due to reduced performance.

If you use a setting other than *Auto*, the Plug&Play functionality of the system BIOS for the corresponding PCI boards is deactivated.

Auto The PCI interrupts are assigned automatically in accordance with the Plug&Play guidelines.

Disabled No ISA interrupt is assigned to the PCI interrupt.

3, 4, 5, 6, 7, 9, 10, 11, 12, 14, 15

The selected ISA interrupt is assigned to the PCI interrupt. You may not select an ISA interrupt that is used by a component on the system board (e.g. controller) or an ISA board.

Following table shows the PCI IRQ routing:

Device	IDSEL	PCI_IRQ	REQ/GNT
VGA/Rage XL	PCI_AD17	PCI_IRQA	REQ#0 / GNT#0

Following table shows the PCI-X 66 MHz IRQ routing:

Device	IDSEL	PCI_IRQ	REQ/GNT
PCIX slot 1	ESB_PXAD19	ESB_PXI RQ#2/ ESB_PXI RQ#1/ ESB_PXI RQ#0/ ESB_PXI RQ#3	ESB_PXREQ#0 ESB_PXGNT#0
LSI 1068	ESB_PXAD21	ESB_PXI RQ#0	ESB_PXREQ#1 ESB_PXGNT#1
PCIX slot 2	PXH_PAAD19	PX_IRQ3 / PX_IRQ0 / PX_IRQ1 / PX_IRQ2	PXH_PAREQ#0 PXH_PAGNT#0

Following table shows the PCI -X133 MHz IRQ routing:

Device	IDSEL	PCI_IRQ	REQ/GNT
PCIX slot 1	PCIA_AD17	PCIA_IRQ0 / PCIA_IRQ1 / PCIA_IRQ2 / PCIA_IRQ3	REQ#0 / GNT#0

IDSEL: ID select

PCI_IRQ: PCI Interrupt Request

REQ/GNT: Request / Grant

3.4 Screen resolution

Depending on the operating system used the screen resolutions in the following table refer to the screen controller on the system board. If you are using an external screen controller, you will find details of supported screen resolutions in the operating manual or technical manual supplied with the controller.

Screen resolution	Refresh rate (Hz)	Max. number of colours
640x480	85	16 Mio.
800x600	85	16 Mio.
1024x768	85	65536
1280x1024	85	256

3.5 Temperature / system monitoring

Temperature and system monitoring aim to reliably protect the computer hardware against damage caused by overheating. In addition, any unnecessary noise is also prevented by reducing the fan speed, and information is provided about the system status.

The temperature and system monitoring are controlled by an onboard controller developed by Fujitsu Siemens.

The following functions are supported:

Temperature monitoring

Measurement of the processor temperature, measurement of the ambient temperature by a temperature sensor on the LED board.

Fan monitoring

Fans that are no longer available, blocked or sticky fans are detected.

Fan control

The fans are regulated according to temperature.

Sensor monitoring

The removal of, or a fault in, a temperature sensor is detected. Should this happen all fans monitored by this sensor run at maximum speed, to achieve the greatest possible protection of the hardware.

Power monitoring

When voltage exceeds warning level high or falls below warning level low an alert will be generated.

System Event Log (SEL)

All monitored events of the system board are signalised via the Global Error LED and recorded in the System Event Log. They could be retrieved in the BIOS Setup or via ServerView.

3.6 Interfaces and Connectors

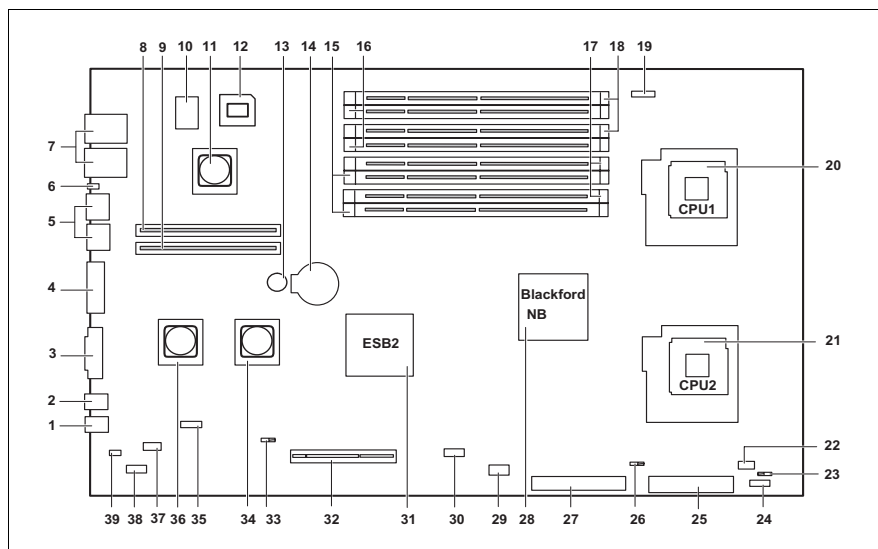


Figure 4: Schematic overview of the system board D2300

1	PS/2 mouse port	21	Intel LGA771 processor 2 socket
2	PS/2 keyboard port	22	PSU I ² connector
3	Serial port COM	23	Backplane board HDD LED cable connector
4	Video port	24	connector for board fan
5	Rear side USB ports	25	system board power plug
6	Top: Rear system health LED indicator (amber) Bottom: Rear UID LED indicator (blue)	26	Power On control connector (JP1)
7	GbE LAN ports	27	connector for IDE data cable
8	PCI-X expansion slot	28	Intel MCH chipset (north bridge)
9	PCI Express x8 expansion slot	29	system configuration switch (sw1)
10	SMSC DME1737 Super I/O Chipset	30	SATA connector

11	Broadcom BCM5715 Gigabit Ethernet controller	31	Intel ESB2 chipset (south bridge)
12	Firmware hub	32	SAS cable connector
13	Internal piezoelectric beep	33	Clear CMOS jumper (JP2)
14	System RTC battery	34	LSI 1068 onboard SAS controller
15	Bank 1 DIMM slots (FBD 1A, FBD 1B)	35	JTAG connector
16	Bank 2 DIMM slots (FBD 1C, FBD 1D)	36	iRMC chipset
17	Bank 3 DIMM slots (FBD 2A, FBD 2B)	37	iPMB connector
18	Bank 4 DIMM slots (FBD 2C, FBD 2D)	38	KVM switch connector
19	Front USB ports system board connector	39	COM2 port connector
20	Intel LGA771 processor 1 socket		

3.6.1 External ports

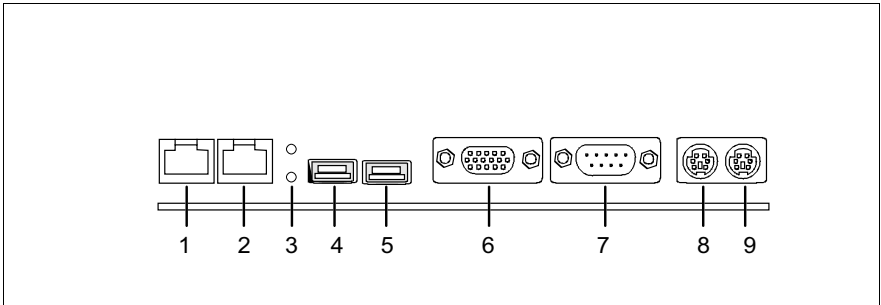


Figure 5: External ports of the system board D2300

- 1

LAN port 1 (10/100/1000 Mbps)
- 2

LAN port 2 (10/100/1000 Mbps / iRMC port)
- 3

LEDs (Global Error and Status)
- 4

USB port1
- 5

USB port 2
- 6

Serial port COM
- 7

VGA port
- 8

PS/2 keyboard port
- 9

PS/2 mouse port

LEDs

LED	Indicator	Meaning
bottom: Identify-LED	blue	server is identified via ServerView
top: Status-LED (Global Error)	orange	indicates a prefailure
	orange flashing	indicates a failure. Reasons for a failure may be: <ul style="list-style-type: none">- overheating of one of the sensors- sensor defect- fan defect- CPU error- Software detected an error

LAN ports

On this system board you will find one Broadcom NetXtreme BMC5715C Gigabit Ethernet Controller (two channel). This LAN controller supports the transfer rates of 10 Mbit/s, 100 Mbit/s and 1 Gbit/s. The LAN controller supports WOL function through Magic Packet™.

It is also possible to boot a device without its own boot hard disk via LAN. Here Intel PXE is supported.

The LAN port serves as management interface (iRMC Port) and is prepared for RemoteView.

The LAN controller connectors are equipped with two LEDs (light emitting diode) indicating the transfer rate and the activity:

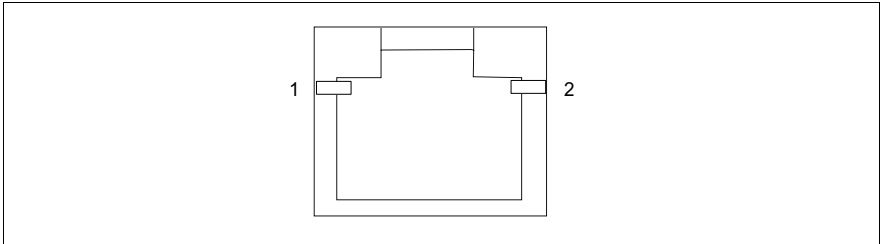


Figure 6: LAN port

1	LAN transfer rate	green + yellow	off	transfer rate 10 Mbit/s (or no connection)
		green	on	transfer rate 100 Mbit/s
		yellow	on	transfer rate 1000 Mbit/s
2	LAN-Link/activity	green	on	LAN connection
			off	no LAN connection
			flashing	LAN transfer

3.7 Settings with jumpers

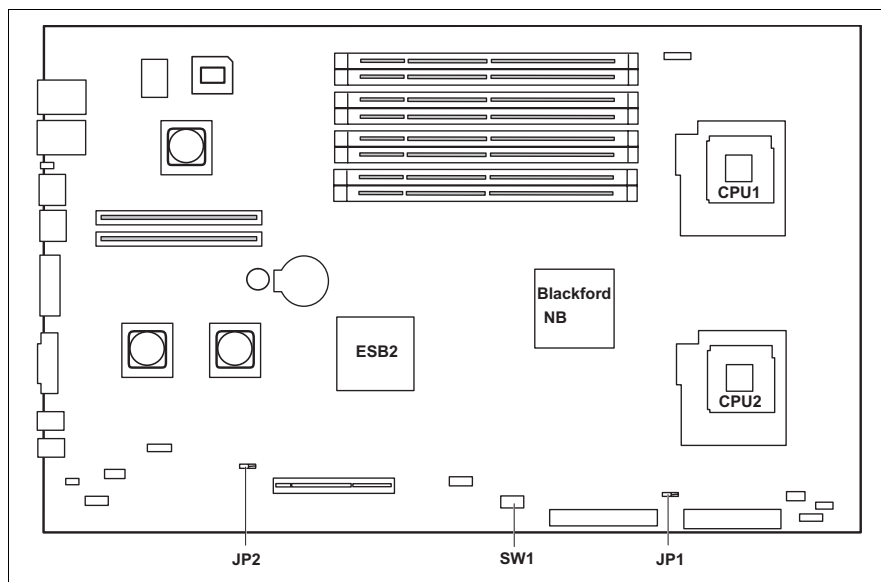


Figure 7: Position of the jumpers

Power-On-Control - jumper 1 (JP1)

- 1-2 default (default setting: by South Bridge and BMC) via IPMI
- 2-3 debug (by South Bridge only)

Clear CMOS - jumper 2 (JP2)

- 1-2 normal, not clear CMOS settings (default setting)
- 2-3 Clear CMOS settings

System configuration switch (SW1)

Switches	Function	Status	Description
SW1-1	BIOS recovery	On	Boot block enabled
		Off	Normal boot
SW1-2	BIOS password recovery	On	Password disabled
		Off	Password enabled
SW1-3	BIOS write-protect	On	BIOS can only be read
		Off	BIOS can both be read and written to
SW1-4	CMOS clear	On	Clear CMOS settings and restore system defaults
		Off	Normal CMOS settings



Switch status indicated in **bold text** is the default setting.

4 Replacing the lithium battery

In order to save the system information permanently, a lithium battery is installed to provide the CMOS-memory with a current. When the charge is too low or the battery is empty, a corresponding error message is provided. The lithium battery must then be replaced.



The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer (CR2450).

Do not throw lithium batteries into the trashcan. It must be disposed of in accordance with local regulations concerning special waste.

Make sure that you insert the battery the right way round. The plus pole must be on the top!

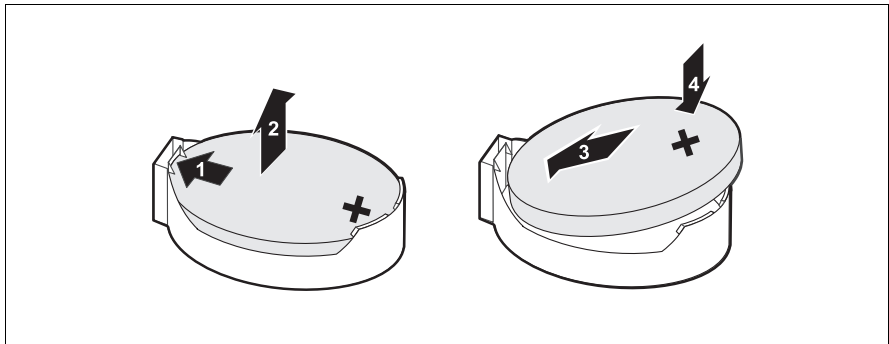


Bild 8: Replacing the lithium battery

- ▶ Press the locking spring into direction of of the arrow (1), so that the lithium-battery jumps out of its socket.
- ▶ Remove the battery (2).
- ▶ Insert a new lithium battery of the same type into the socket (3) and (4).

Abbreviations

The technical terms and abbreviations given below represent only a selection of the full list of common technical terms and abbreviations.

Not all technical terms and abbreviations listed here are valid for the described system board.

ACPI

Advanced Configuration and Power management Interface

ASSR

Automatic Server Recovery and Restart

ATA

Advanced Technology Attachment

BBU

Battery Backup Unit

BIOS

Basic Input Output System

BMC

Baseboard Management Controller

CMOS

Complementary Metal Oxide Semiconductor

COM

COMmunication port

CPU

Central Processing Unit

DDR

Double Data Rate

DIMM

Dual In-line Memory Module

Abbreviations

DIP

Dual In-line Package

DMI

Desktop Management Interface

DRAM

Dynamic Random Access Memory

ECC

Error Correction Code

EEPROM

Electrical Erasable Programmable Read Only Memory

EPROM

Erasable Programmable Read Only Memory

EMRL

Embedded RAID Logic

EVRD

Enterprise VRD

HPC

Hot plug Controller

ICE

In Circuit Emulation

IDE

Integrated (intelligent) Drive Electronics

IME

Integrated Mirror Enhanced

IOOP

Intelligent Organisation Of PCI

IPMB

Intelligent Platform Management Bus

IPMI	Intelligent Platform Management Interface
LAN	Local Area Network
LED	Light Emitting Diode
MPS	Multi Processor Specification
NMI	Non Maskable Interrupt
OEM	Original Equipment Manufacturer
OHCI	Open Host Controller Interface
OS	Operating System
PCI	Peripheral Components Interconnect
PDA	Prefailure Detection and Analyzing
PIO	Programmed Input Output
PLD	Programmable Logic Device
PS(U)	Power Supply (Unit)
PWM	Puls Wide Modulation

Abbreviations

PXE

Preboot eXecution Environment

RAID

Redundant Array if Inexpensive Disks

RSB

Remote Service Board

RST

ReSeT

RTC

Real Time Clock

SCSI

Small Computer Systems Interfatche

SDDC

Single Device Data Correction

SDRAM

Synchronous Dynamic Random Access Memory

SHDG

Server Hardware Design Guide

SMB

System Management Bus

SMM

Server Management Mode

SMP

Symmetrically Multi Processing

UHCI

Unified Host Controller Interface

USB

Universal Serial Bus

VGA	Video Graphics Adapter
VRD	Voltage Regulator Down
VRM	Voltage Regulator Module
WfM	Wired for Management
WOL	Wake up On LAN

Fujitsu Siemens Computers GmbH
User Documentation
85521 Ottobrunn
Germany

Fax: 0 700 / 372 00000

email: manuals@fujitsu-siemens.com
<http://manuals.fujitsu-siemens.com>

Submitted by

Comments
Suggestions
Corrections

Comments on D2300
Technical Manual



Fujitsu Siemens Computers GmbH
User Documentation
85521 Ottobrunn
Germany

Fax: 0 700 / 372 00000

email: manuals@fujitsu-siemens.com
<http://manuals.fujitsu-siemens.com>

Submitted by

Comments
Suggestions
Corrections

Comments on D2300
Technical Manual





Information on this document

On April 1, 2009, Fujitsu became the sole owner of Fujitsu Siemens Computers. This new subsidiary of Fujitsu has been renamed Fujitsu Technology Solutions.

This document from the document archive refers to a product version which was released a considerable time ago or which is no longer marketed.

Please note that all company references and copyrights in this document have been legally transferred to Fujitsu Technology Solutions.

Contact and support addresses will now be offered by Fujitsu Technology Solutions and have the format ...@ts.fujitsu.com.

The Internet pages of Fujitsu Technology Solutions are available at

[http://ts.fujitsu.com/...](http://ts.fujitsu.com/)

and the user documentation at <http://manuals.ts.fujitsu.com>.

Copyright Fujitsu Technology Solutions, 2009

Hinweise zum vorliegenden Dokument

Zum 1. April 2009 ist Fujitsu Siemens Computers in den alleinigen Besitz von Fujitsu übergegangen. Diese neue Tochtergesellschaft von Fujitsu trägt seitdem den Namen Fujitsu Technology Solutions.

Das vorliegende Dokument aus dem Dokumentenarchiv bezieht sich auf eine bereits vor längerer Zeit freigegebene oder nicht mehr im Vertrieb befindliche Produktversion.

Bitte beachten Sie, dass alle Firmenbezüge und Copyrights im vorliegenden Dokument rechtlich auf Fujitsu Technology Solutions übergegangen sind.

Kontakt- und Supportadressen werden nun von Fujitsu Technology Solutions angeboten und haben die Form ...@ts.fujitsu.com.

Die Internetseiten von Fujitsu Technology Solutions finden Sie unter

[http://de.ts.fujitsu.com/...](http://de.ts.fujitsu.com/), und unter <http://manuals.ts.fujitsu.com> finden Sie die

Benutzerdokumentation.

Copyright Fujitsu Technology Solutions, 2009